


## VPC-Tip #29 Changing Bracing Type in v4.0

**Forcing Bracing to Generate:** VPCCommand will generate bracing as needed. For example; when you add a framed opening, VPC will generate the bracing to allow you to check for possible interference. You can do this as follows:

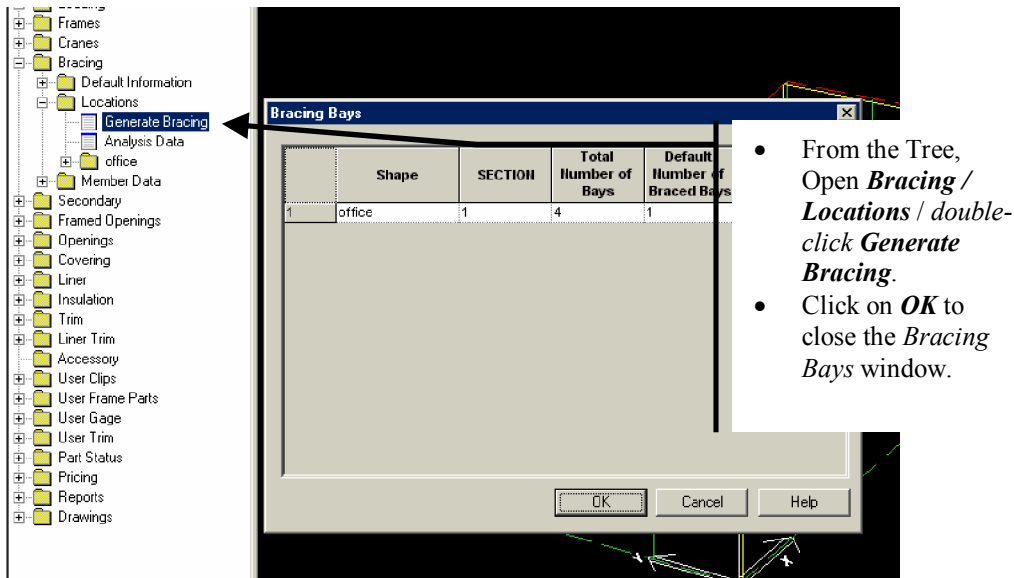

**Changing Bracing Type:** The procedure to change bracing has changed in v4.0.

