



VPC-TIP

September 14, 2001

Correct Loading in VPCCommand

Just a reminder that if you **apply** the “*Reference Values*” at the **Loads and Codes** window it is just that, “*For Reference Only*”. This data is provided by MBMA for reference, you **MUST** make sure you meet your local building codes and project specification requirements!

Item	Value	Units
Data for Selected Location:		
State (Province)	Virginia	
County (Location)	Warren	
Ground Snow	95.00	psf
Rain Surcharge	N/A	
Wind	70.00	mph
Wind 1/10 year	N/A	
Wind 1/30 (1/50) year	N/A	
Wind 1/100 (1/200) year	N/A	
Temperature Correction Factor	N/A	
Oceanline Distance	94.00	Miles
Seismic Zone	N/A	
Aa (Za)	0.0500	
Av (Zv)	0.0500	
Velocity Ratio	N/A	

Note: These values should not be used if they are less severe than the Building Code or specification requirements.

Apply Values

OK Cancel Apply Help

- The “*Reference Values*” tab lists MBMA data for the State and County you input under the General Information window.
- If you “Apply” this data, you **MUST** go to each loading tab and **make sure you meet your Local Building codes and project specifications**.

